

# QUICK GUIDE - SETTING UP YOUR **weiser** CAN



1. Turn on the bike's ignition (**DO NOT** start the engine).
2. Press and hold the indicator cancel button for 20 seconds until both left and right rear indicators flash every couple of seconds, then release the button.
3. You are now in **Set-Up** mode.

## Left Rear Indicator

Shows which **menu** is selected.  
Press [Indicator Cancel] to cycle through the menu levels.

## Right Rear Indicator

Shows which **function** is selected.  
Use "WonderWheel" to scroll through the function options.  
Use [Menu Up] to save selection.

### Menu 1

Rear lights mode  
Default setting: Weiser mode

*\*(**DO NOT** select Indicator Only function unless you have installed an aux running/brake light.)*

### Function Options:

1. Weiser mode 
2. BMW OEM stock mode  
3. BMW USA stock mode   
4. **Indicator Only Function\***    

### Menu 2

Aux tail light - running light brightness  
Default setting: ON (brightness level 3)

### Function Options:

Rotate the "WonderWheel" to set tail light running brightness (8 settings from OFF to maximum brightness).



### Menu 3

Aux tail light - brake light brightness  
Default setting: ON (maximum brightness)

### Function Options:

Rotate the "WonderWheel" to set tail light brake brightness (8 settings from OFF to maximum brightness).



### Menu 4

Brake hyper-flash  
Default setting: OFF

### Function Options:

1. ON over 15mph (24km/h) 
2. ON over 35mph (56km/h)  
3. ON over 55mph (88km/h)   
4. ON (active at all speeds)    
5. OFF (No hyper-flash) 

### Menu 5

Front running light brightness\*\*  
Default setting: ON (brightness level 4)

### Function Options:

Rotate the "WonderWheel" to set front light running brightness (6 settings from OFF to maximum brightness).



\*\*WeiserCAN Front Kit required.

To **RESET TO DEFAULT** settings, press and hold Menu Down for 5 seconds.  
For further information see video at: [weisertechnik.com](http://weisertechnik.com)



Designed & Manufactured in the UK