


## HOW TO CONNECT

### OPTION 1

#### BMW OEM FRONT INDICATORS

Designed for BMW R1300 GS  
GSA and RS Models

MODEL SHOWN:  
R1300 GS ADVENTURE  
(Connection positions are  
similar on all R1300 models)

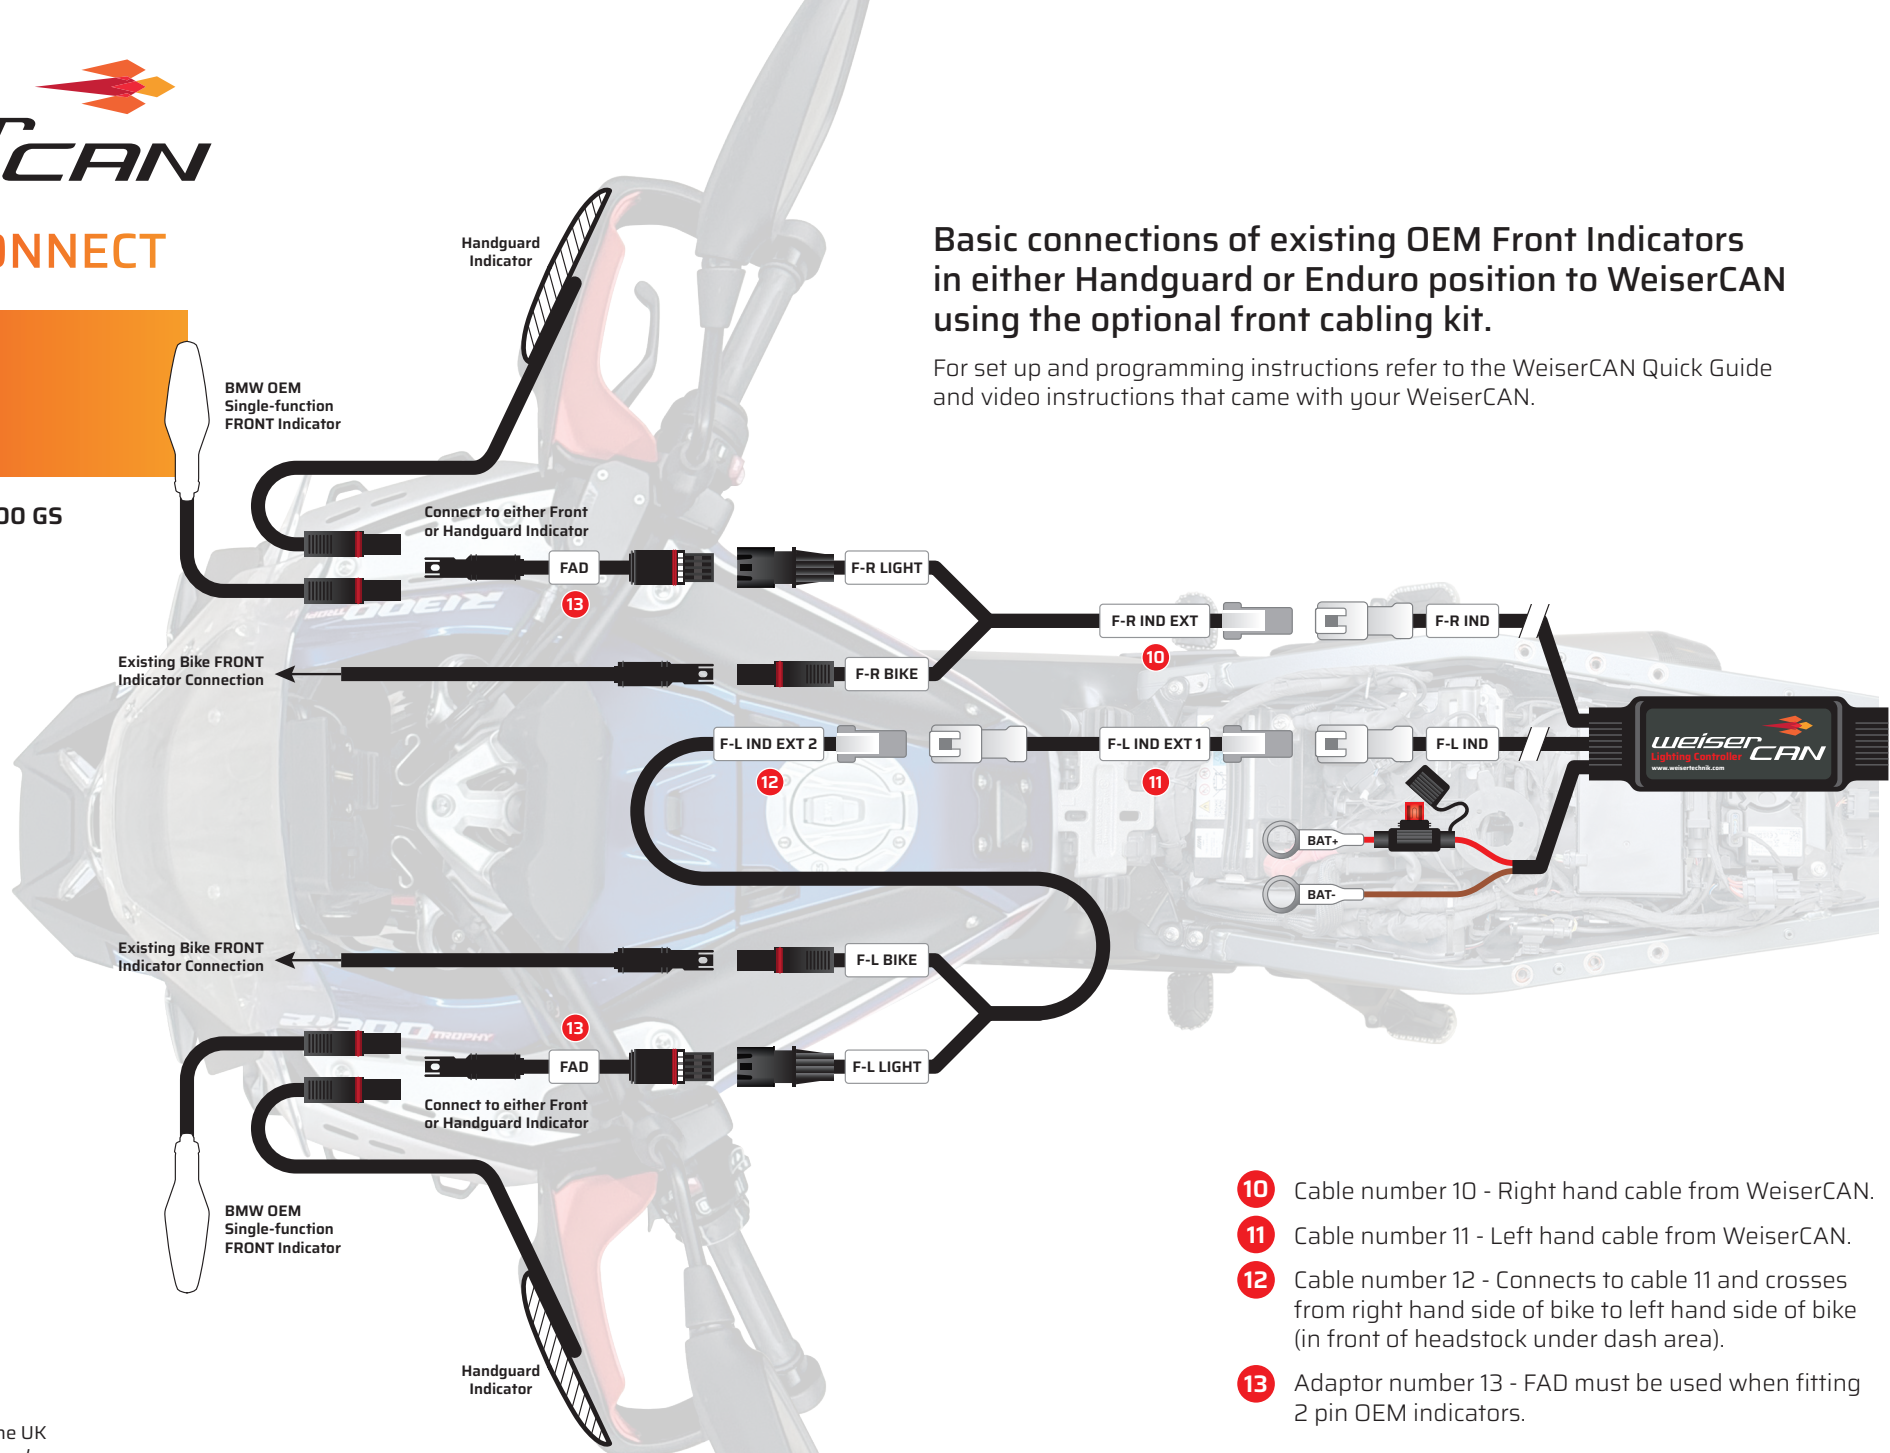

Basic connections of existing OEM Front Indicators in either Handguard or Enduro position to WeiserCAN using the optional front cabling kit.

For set up and programming instructions refer to the WeiserCAN Quick Guide and video instructions that came with your WeiserCAN.

- 10** Cable number 10 - Right hand cable from WeiserCAN.
- 11** Cable number 11 - Left hand cable from WeiserCAN.
- 12** Cable number 12 - Connects to cable 11 and crosses from right hand side of bike to left hand side of bike (in front of headstock under dash area).
- 13** Adaptor number 13 - FAD must be used when fitting 2 pin OEM indicators.



Designed & Manufactured in the UK  
Images representative not to scale