


HOW TO CONNECT

OPTION 4

BOTH BMW OEM HANDGUARD & WEISERCAN EXT-CAN-DTC ENDURO POSITIONED FRONT INDICATORS

Designed for BMW R1300 GS GSA and RS Models

MODEL SHOWN: R1300 GS ADVENTURE
(Connection positions are similar on all R1300 models)

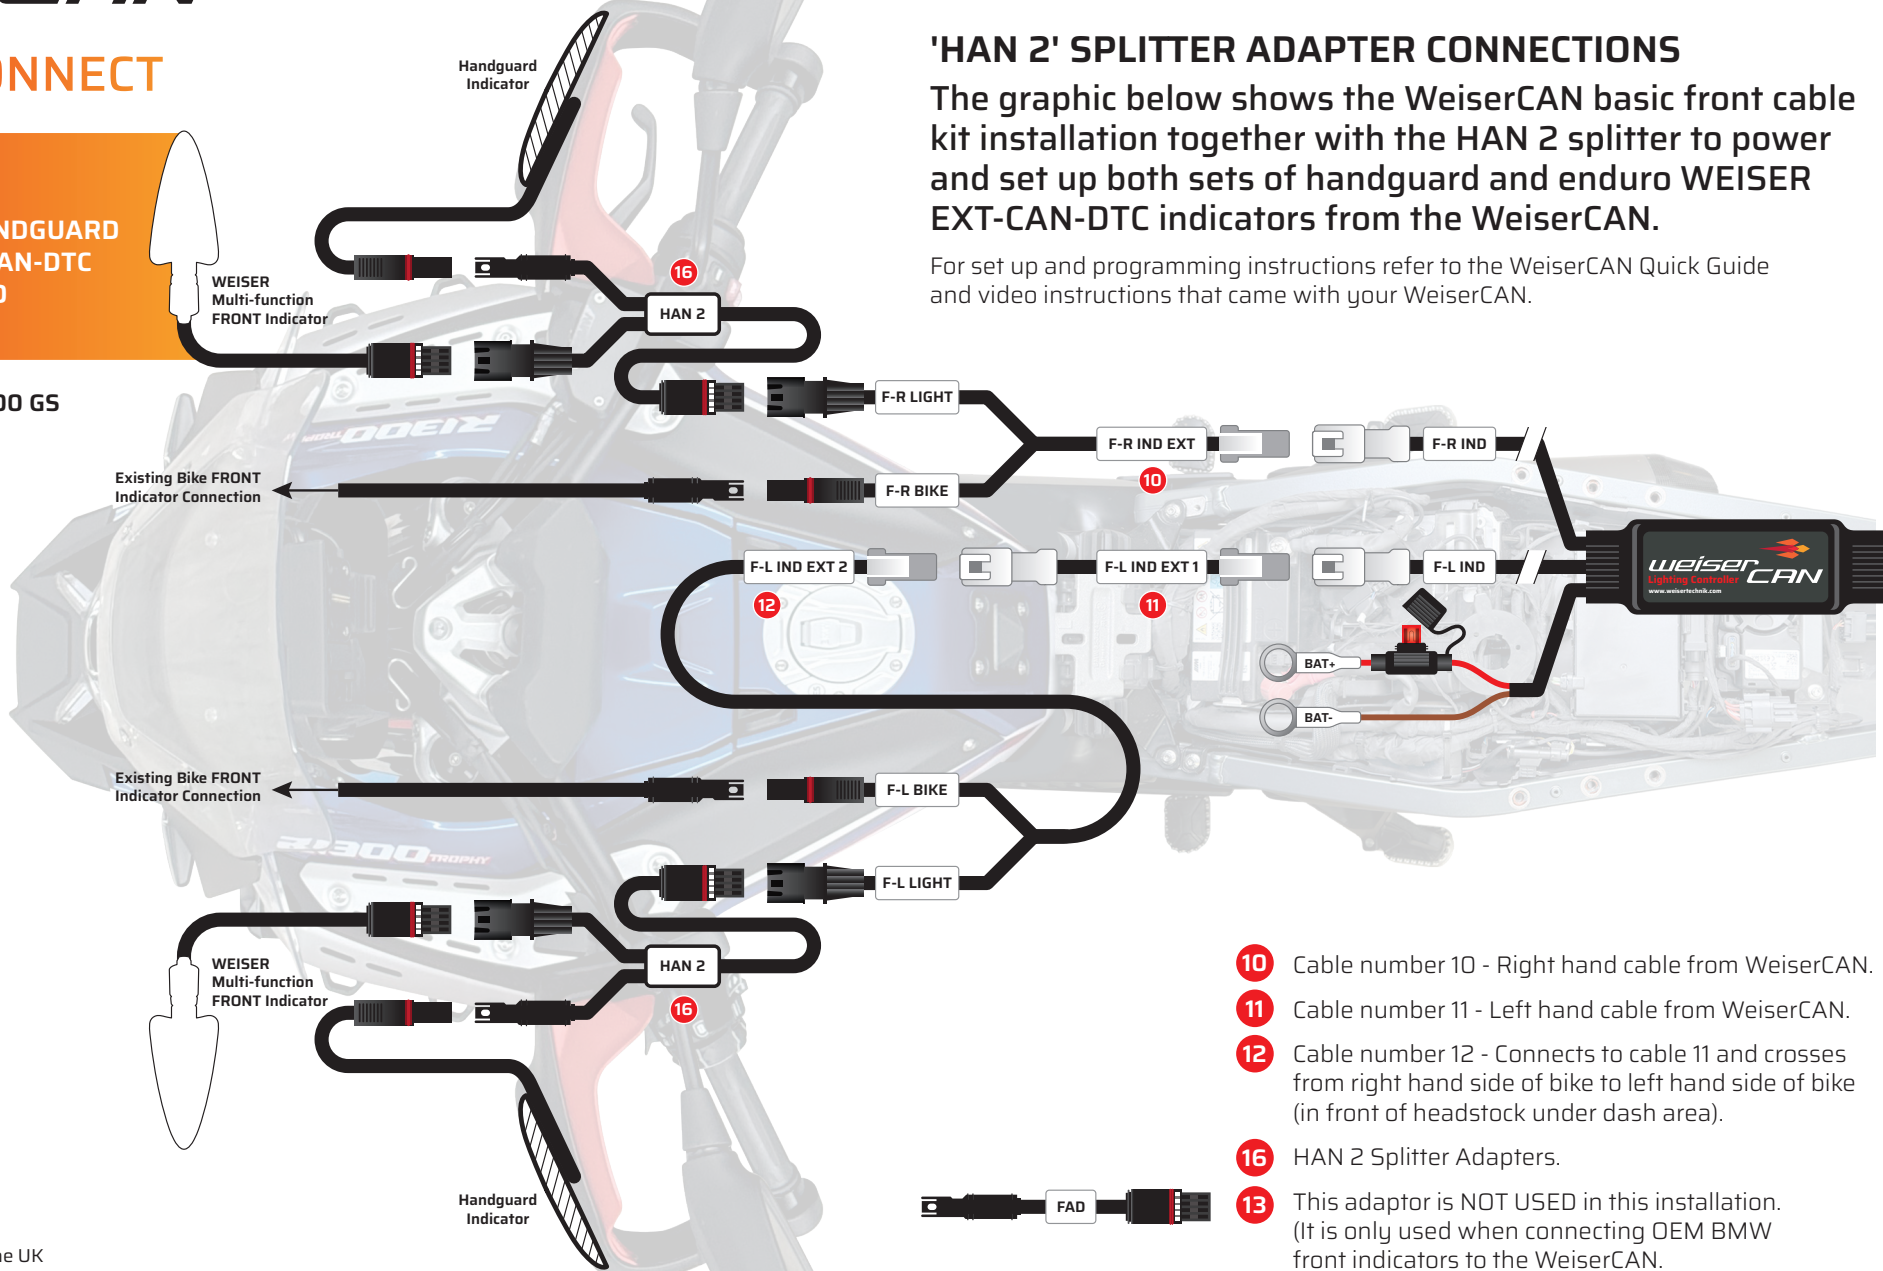

'HAN 2' SPLITTER ADAPTER CONNECTIONS

The graphic below shows the WeiserCAN basic front cable kit installation together with the HAN 2 splitter to power and set up both sets of handguard and enduro WEISER EXT-CAN-DTC indicators from the WeiserCAN.

For set up and programming instructions refer to the WeiserCAN Quick Guide and video instructions that came with your WeiserCAN.

- 10** Cable number 10 - Right hand cable from WeiserCAN.
- 11** Cable number 11 - Left hand cable from WeiserCAN.
- 12** Cable number 12 - Connects to cable 11 and crosses from right hand side of bike to left hand side of bike (in front of headstock under dash area).
- 16** HAN 2 Splitter Adapters.
- 13** This adaptor is NOT USED in this installation. (It is only used when connecting OEM BMW front indicators to the WeiserCAN.)



Designed & Manufactured in the UK
Images representative not to scale