


## HOW TO CONNECT

### OPTION 4

**BOTH BMW OEM HANDGUARD & WEISERCAN EXT-CAN-DTC ENDURO POSITIONED FRONT INDICATORS**

Designed for BMW R1300 GS GSA and RS Models

MODEL SHOWN:  
R1300 GS ADVENTURE  
(Connection positions are similar on all R1300 models)

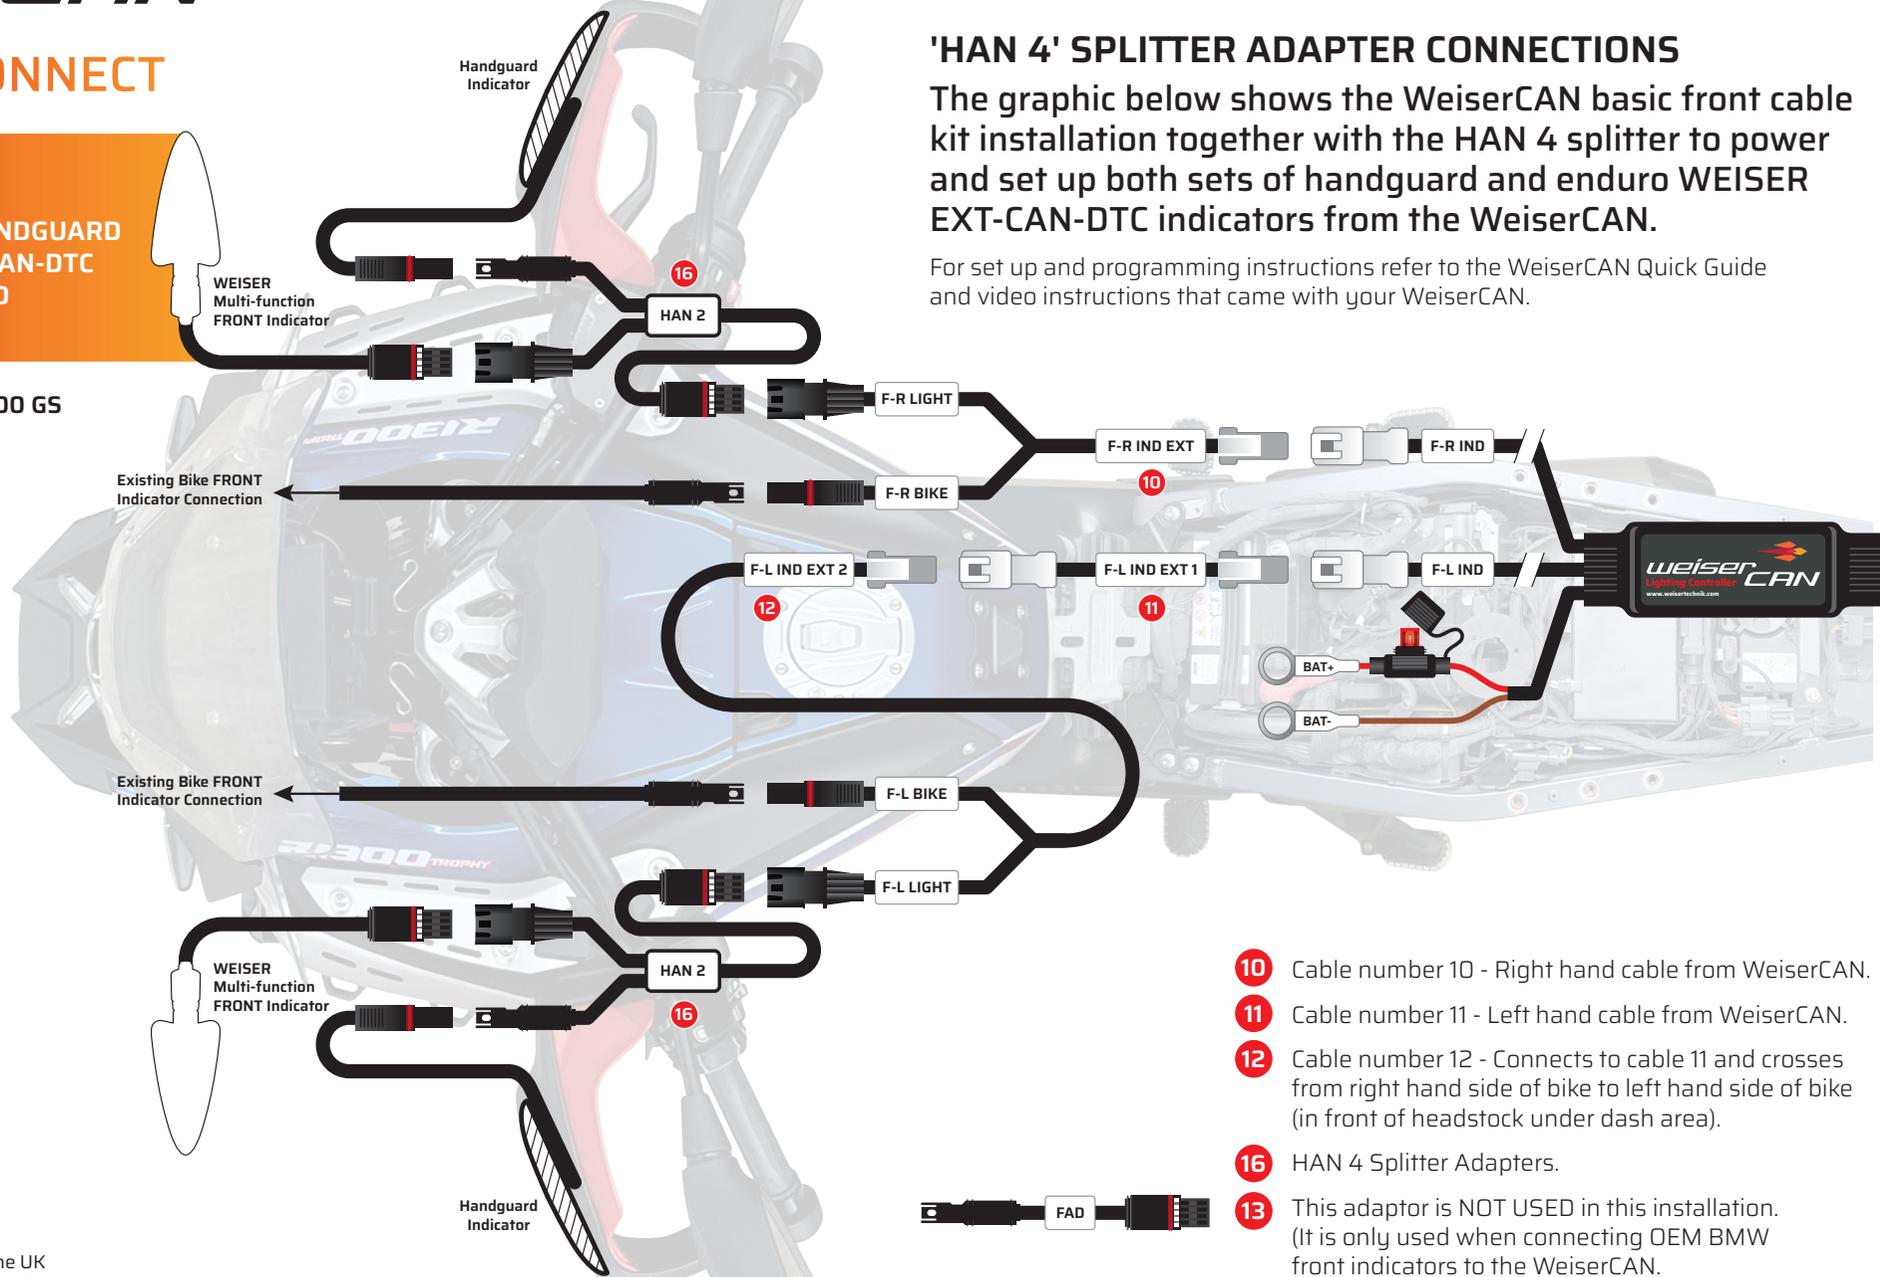

### 'HAN 4' SPLITTER ADAPTER CONNECTIONS

The graphic below shows the WeiserCAN basic front cable kit installation together with the HAN 4 splitter to power and set up both sets of handguard and enduro WEISER EXT-CAN-DTC indicators from the WeiserCAN.

For set up and programming instructions refer to the WeiserCAN Quick Guide and video instructions that came with your WeiserCAN.

- 10** Cable number 10 - Right hand cable from WeiserCAN.
- 11** Cable number 11 - Left hand cable from WeiserCAN.
- 12** Cable number 12 - Connects to cable 11 and crosses from right hand side of bike to left hand side of bike (in front of headstock under dash area).
- 16** HAN 4 Splitter Adapters.
- 13** This adaptor is NOT USED in this installation. (It is only used when connecting OEM BMW front indicators to the WeiserCAN.)



Designed & Manufactured in the UK  
Images representative not to scale