


HOW TO CONNECT

2018-24 R1250 GS
2018-24 R1250 GS ADVENTURE
2018-24 R1250 RS
2018-24 R1250 R

USE THE BULLET POINTS SHOWN
ALONGSIDE THE VIDEO INSTALL GUIDE
TO HELP CONNECT YOUR WEISERCAN



Designed & Manufactured in the UK
Images representative not to scale

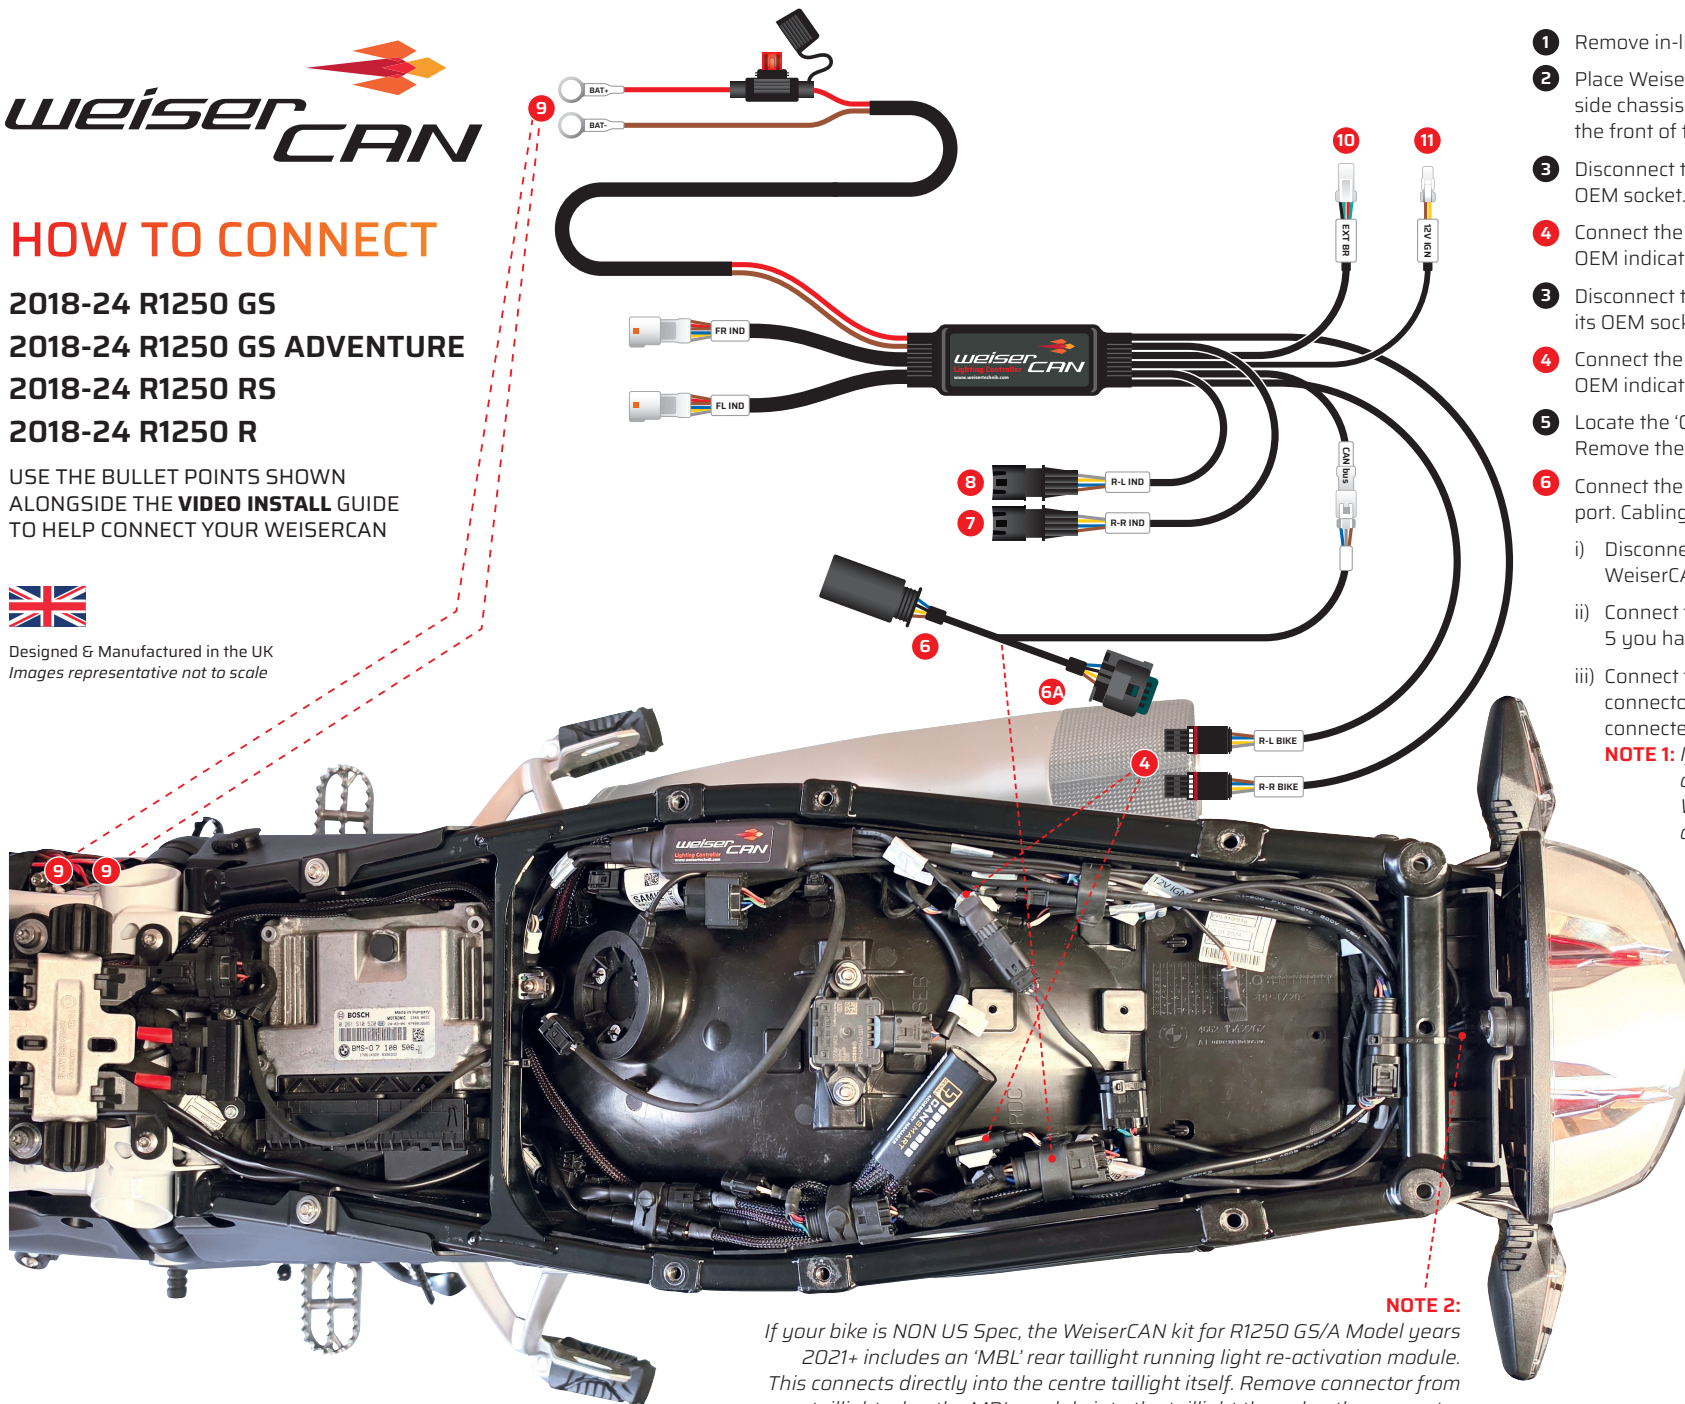

- 1 Remove in-line fuse from WeiserCAN fuse holder.
- 2 Place WeiserCAN along either the right-hand or the left-hand side chassis rail with the FRONT output cables pointing towards the front of the motorbike.
- 3 Disconnect the REAR-LEFT BMW indicator connector from its OEM socket.
- 4 Connect the WeiserCAN long cable marked **(R-L-BIKE)** into the OEM indicator SOCKET.
- 3 Disconnect the REAR-RIGHT BMW indicator connector from its OEM socket.
- 4 Connect the WeiserCAN long cable marked **(R-R-BIKE)** into the OEM indicator SOCKET.
- 5 Locate the 'CANbus access port' connector on the motorcycle. Remove the connector in this port.
- 6 Connect the WeiserCAN CANbus interface connector to this port. Cabling as follows:
 - i) Disconnect the Canbus port connector. Then connect the WeiserCAN CANbus interface **CONNECTOR 5** as follows:
 - ii) Connect the interface cable **CONNECTOR 6** into the SOCKET 5 you have just removed the connector from.
 - iii) Connect the other end of the interface cable **CONNECTOR 6A** connector 5 (that was left disconnected). These are now connected in tandem.
- NOTE 1:** If you have another CANbus auxiliary manager connected to the same port just 'daisy chain' the WeiserCAN in line following the same directions as above. (There will be no conflict between devices).
- 7 Connect the **RIGHT-REAR** indicator cable connector into the WeiserCAN socket (labelled **R-R-IND**).
- 8 Connect the **LEFT-REAR** indicator cable connector into the WeiserCAN socket (labelled **R-L-IND**).
- 9 Connect the WeiserCAN battery **NEGATIVE** terminal (**brown cable**) to the NEGATIVE terminal on the battery.
Connect the WeiserCAN battery **POSITIVE** terminal (**red cable**) to the POSITIVE terminal on the battery.
- 10 Auxiliary running/brake light connects here (labelled **EXT BR**). If installing two or more brake lights use a 'Y' splitter connector.
- 11 12V 'Ignition on' accessory connector: for use please refer to the instructions in the WeiserCAN kit.
- 12 Re-install the in-line fuse and you're good to go.

NOTE 2:

If your bike is NON US Spec, the WeiserCAN kit for R1250 GS/A Model years 2021+ includes an 'MBL' rear taillight running light re-activation module. This connects directly into the centre taillight itself. Remove connector from taillight, plug the MBL module into the taillight then plug the connector taken out of the taillight into the opposite end of the MBL module.